

O Clam-P Installation Manual

Step 1:

Place O Clam-P onto panel.

It is recommended to mount the O Clam-P approximately 7 inches from the corner of the panel frame. Either side of the panel in portrait or landscape.




Step 2:

Slide Optimizer/microinverter between washer and Clam-P.

***Make sure star washer is between panel frame and optimizer.**

****Star washer not necessary for Mill Finish Clam-P's.**

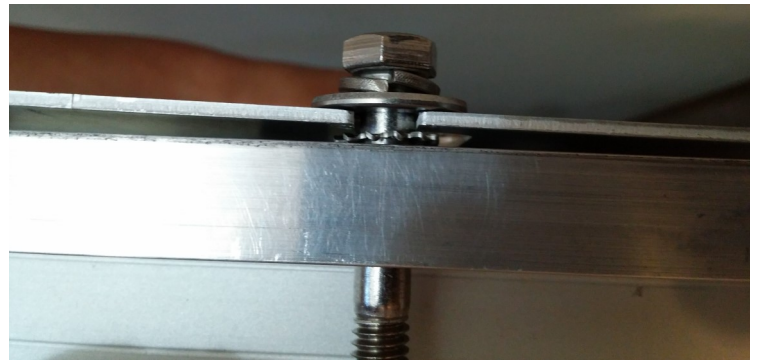

Step 3:

Tighten to 10 lb.-ft.

